
Intelligent Toilet Installation Instruction

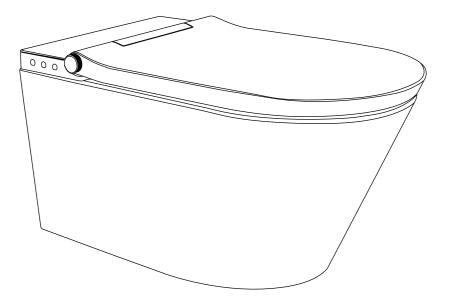

Apply to MM-4020-F



Important Note

Installation Instructions

Installation instructions are used to guide the correct installation toilet. Please read them carefully before installation.

Icon and Meaning Explanation

🖄 Danger Inevitably, it will lead to serious injury and even death.

🖄 Caution Represents an operation practice unrelated to physical injury.

Please read the instructions in this chapte

Target Reader and Installer Qualifications

This intelligent toilet level related water pipe can only be installed by qualified plumbers. Electrical installation can only be carried out by qualified electricians.

Safety instructions

A Caution Product and/or performance damage

* Be sure to abide by the national/regional standards and local installation regulations.

 \triangle Caution The product is damaged by the freezing of water.

 * It is forbidden to install intelligent toilets in rooms at risk of frost. The lowest indoor temperature is not less than 4 C.

🖄 Caution Damage caused by condensation of water vapor

* When the intelligent toilet is moved from the low temperature environment to the high temperature environment, please unplug the power for several hours first.

It is strictly forbidden to dismantle independent parts and components

🖄 Danger Deadly electric shock danger!

* If the power cord is damaged, it must be replaced by the manufacturer's maintenance personnel or similar professionals.

* Instruments must be properly grounded.

* Fixed wiring must be equipped with an electric shock distance device to provide full-pole disconnection under over-voltage level III conditions according to wiring rules.

* Fixed wiring power supply wire specifications for wire nominal cross-sectional area of 1-2.5 square millimeters.


* Determine that the grounding end of the power supply line is 10 mm longer than that of the fire line (L) and the zero line (N).

🛆 Caution

* The unit of length in this installation instruction is millimeter (mm).

* The appliance will be permanently connected to the water pipe. Remove the water pipe assembly except for installation and maintenance.

Bill of materials

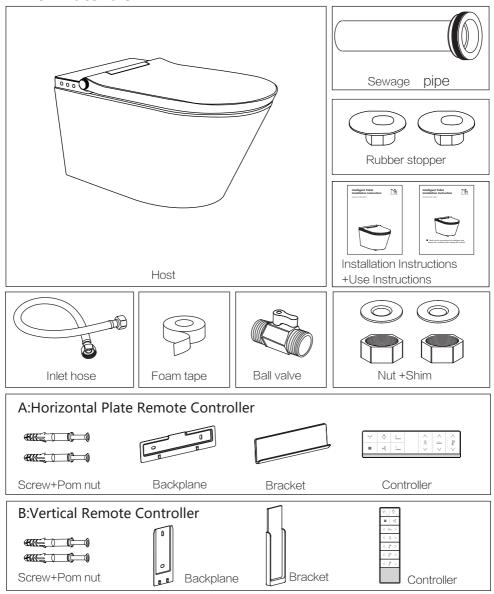


A Caution Remote Control Installation


* Please make sure that the toilet is installed before the remote control is installed.

* Letter A: Represents the installation steps of the horizontal panel remote control.

* Letter B: Represents the installation steps of the vertical remote control. According to the type of remote control you choose, install it step by step.

Installation tools

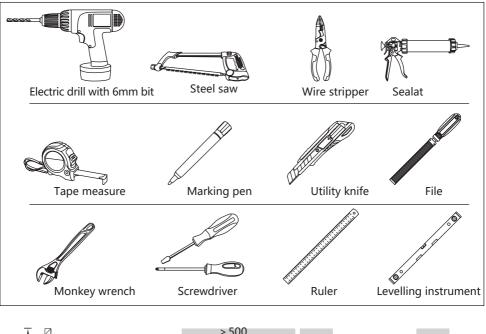

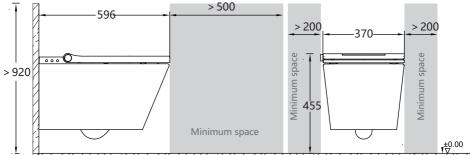


Installation Mode 1


Confirmation before installation


- 1. The toilet installation area should be equipped with intake pipes.
- 2. The toilet installation area should be equipped with power cord.


🖄 DANGER


This operation should be carried out by a professional.

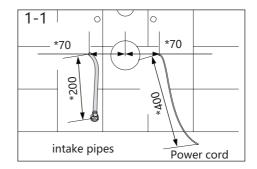


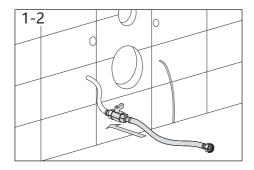


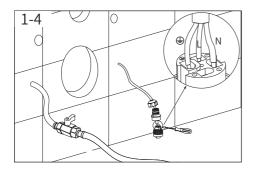


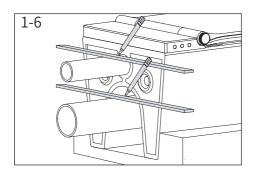


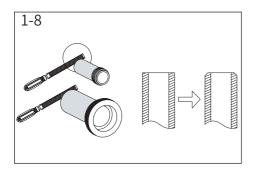


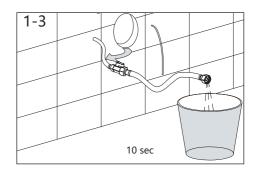


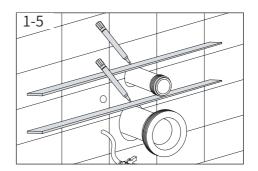


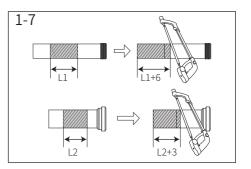


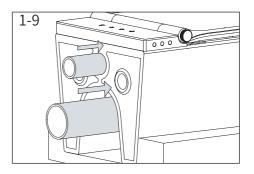


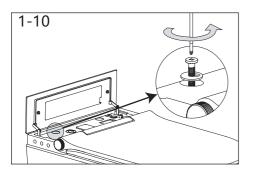


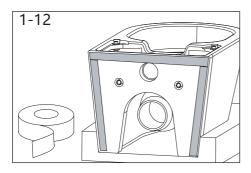


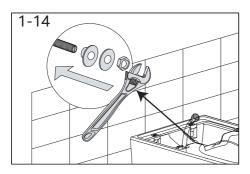


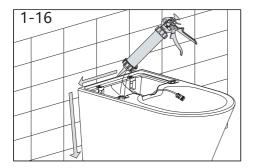


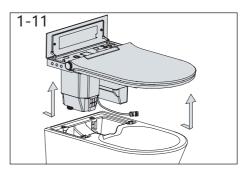


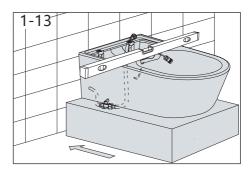


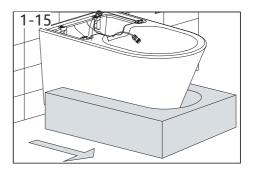


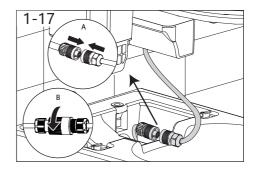


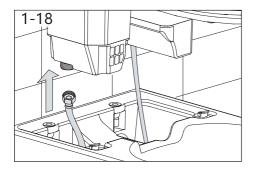

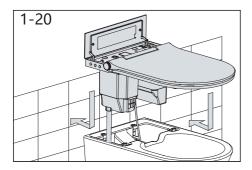

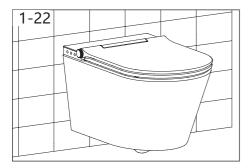

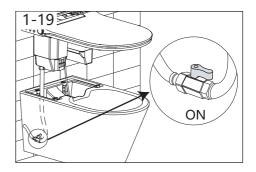


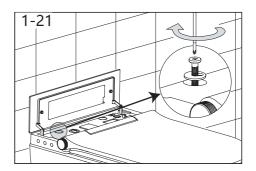


Remote Control Inatallation


1-A


Horizontal plate remote control inatallation "*" Recommended size

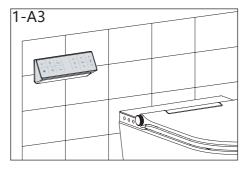


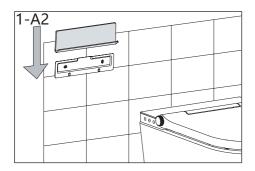



1-B Vertial remote control inatallation "*" Recommended size

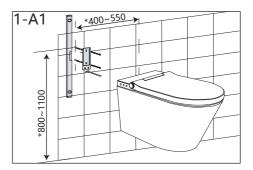

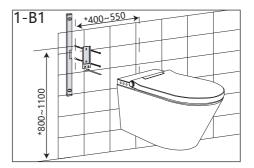

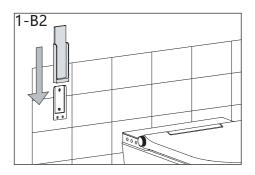

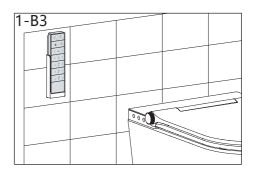

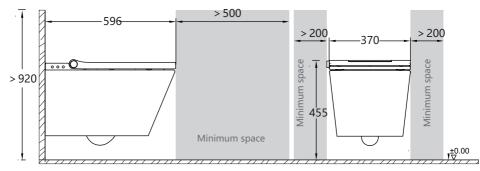


Installation Mode 2


Confirmation before installation


- 1. The toilet installation area should be equipped with angle valves.
- 2. The toilet installation area should be equipped with power sockets.

A DANGER


This operation should be carried out by a professional.

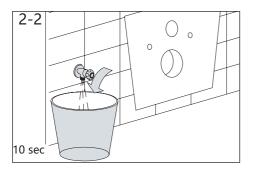


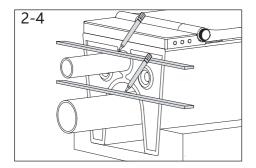


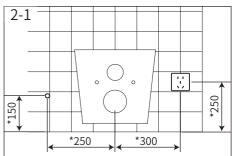



"*" Recommended size

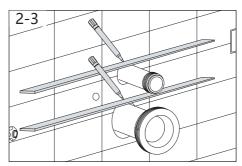


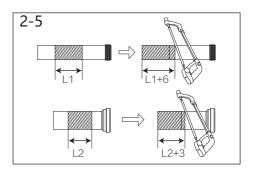


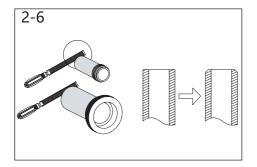


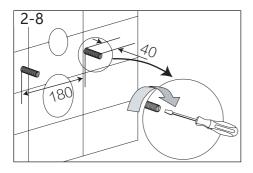


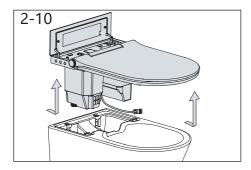


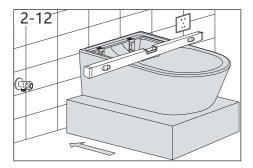

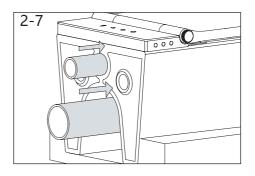


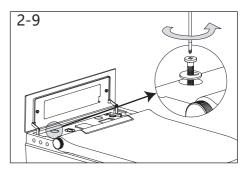


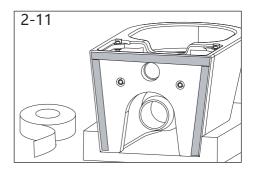


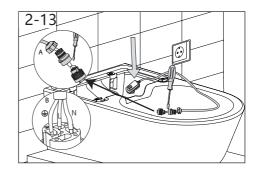



- 2-2 -

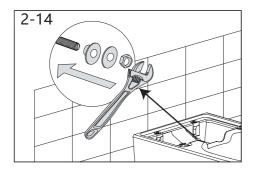


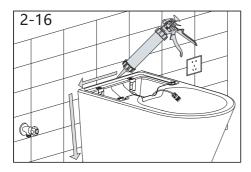


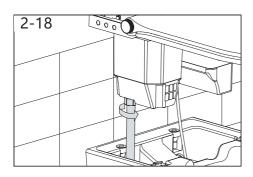


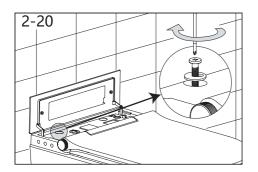

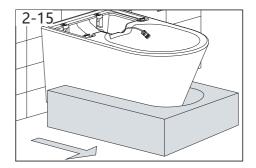

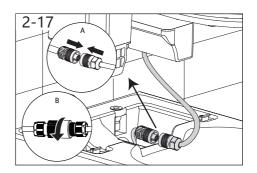

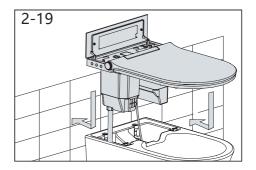


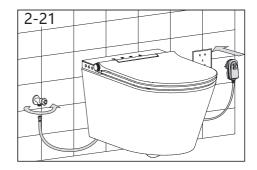


Remote Control Inatallation


2-A


Horizontal plate remote control inatallation "*" Recommended size

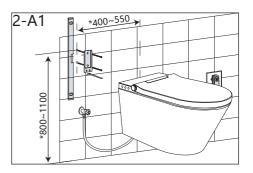


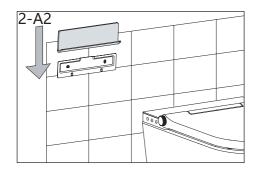


2-B Vertial remote control inatallation "*" Recommended size

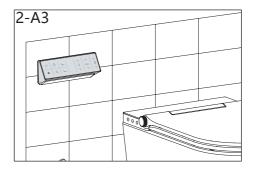

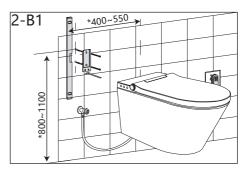

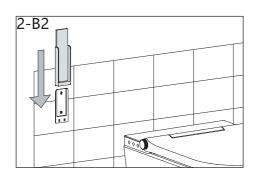

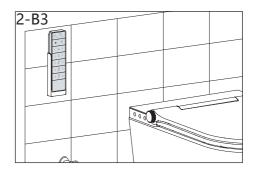

- 2-4 -

VIVO Sp. z o. o.

 Add:
 Bartycka 26/24, 00-716
 Warszawa, Polska

 Tel. +48 888 593 158
 Kom. +48 735 877 668

 E-mail: vivo@majormaker.pl
 Web.: www.majormaker.pl